
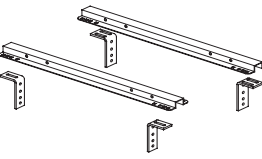
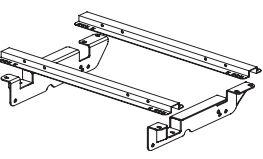
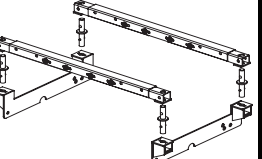

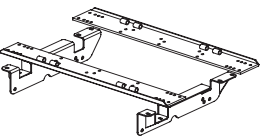




(SuperBracket Custom Brackets and SuperRail Brackets are not interchangeable - SuperBrackets use standard Super 5<sup>th</sup> base rails - SuperRails are unique, totally removeable base rails.)

### Super 5<sup>th</sup> Mounting Kit Application Chart - 2005

Universal Mounting Kits	SuperBracket Mounting Kits	SuperRail Mounting Kits
Kit Includes "L" Brackets, Base Rails & Hardware	Kit Includes Custom Mounting Brackets, Base Rails, & Hardware	Kit Includes SuperRails, SuperRail Brackets & Hardware
Long Bed & Short Bed	Long Bed & Short Bed	Long Bed & Short Bed

Super 5 <sup>th</sup> Mounting Kit Application Chart - 2005	16,000 & 20,500 Super 5 <sup>th</sup> Hitches		Universal Kit	SuperBracket Kit	SuperRail Kit			
								
	Chevrolet		PullRite #	Part #	PullRite # <small>(positions hitch centered on axle)</small>	Part #	PullRite #	Part #
	1988 - 1998		0820		n/a	n/a	n/a	n/a
	1999 - 2000 Ext/Crew Cab Long Bed ¾ & 1 Ton		0820		n/a	n/a	na	n/a
	1999 - 2004 Light & Heavy Duty (NOT '04 1500 5'8" bed)		0820		0826		0843	
	Dodge				<small>(positions hitch ahead of axle)</small>			
	1995 - 2002 (except '02-'04 ½ Ton)		0820		0824		0842	
	2002 - 2004 ½ Ton (requires drilling 8 holes)		0820		n/a	n/a	n/a	n/a
	2003 - 2004 ¾ & 1 T (except 2WD 1T) (NO DRILL)		n/a	n/a	0827		0844	
2003 - 2004 1 T 2WD (NO DRILL) *price check required		n/a	n/a	**0828		n/a	n/a	
Ford				<small>(positions hitch ahead of axle)</small>				
1987 - 1998 Super Duty		0820		n/a	n/a	n/a	n/a	
1997 - 2003 Light Duty		0820		n/a	n/a	n/a	n/a	
1999 - 2005 Super Duty		0820		0822		0841		
2004 - 2005 Light Duty (requires drilling 8 holes)		0820		n/a	n/a	n/a	n/a	
25,500 & Low Profile Super 5 <sup>th</sup>		Universal Kit	SuperBracket Kit	SuperRail Kit				
						n/a		
Chevrolet		PullRite #	Part #	PullRite #	Part #	PullRite #	Part #	
1988 - 1998		0520		0517		n/a	n/a	
1999 - 2000 Ext/Crew Cab Long Bed ¾ & 1 Ton		0520		0517		n/a	n/a	
1999 - 2004 Light & Heavy Duty (NOT '04 1500 5'8" bed)		0520		0527		n/a	n/a	
Dodge								
1995 - 2002 (except '02-'04 ½ Ton)		0520		0524		n/a	n/a	
2003 - 2004 ¾ & 1 T (NO DRILL) (requires price check)		n/a	n/a	**0525		n/a	n/a	
Ford								
1987 - 1998 Super Duty		0520		n/a	n/a	n/a	n/a	
1999 - 2005 Super Duty		0520		0522		n/a	n/a	
Adjustable Height 25,500 & Low Profile Hitches		Universal Kit	SuperBracket Kit	SuperRail Kit				
Chevrolet		PullRite #	Part #	PullRite #	Part #	PullRite #	Part #	
1988 - 1998		0521		0530		n/a	n/a	
1999 - 2000 Ext/Crew Cab Long Bed ¾ & 1 Ton		0521		0530		n/a	n/a	
1999 - 2004 Light & Heavy Duty (NOT '04 1500 5'8" bed)		0521		0531		n/a	n/a	
Dodge								
1995 - 2002 (except 2002 ½ Ton)		0521		0528		n/a	n/a	
2003 - 2004 ¾ & 1 T (NO DRILL) (requires price check)				*0525				
Ford								
1987 - 1998 Super Duty		0521		n/a	n/a	n/a	n/a	
1999 - 2005 Super Duty		0521		0526		n/a	n/a	